


After 181 Years **Turf Pride** is Reinventing the Bedknife!

We are now making a 45 degree "Manufactured Relief" standard on all of our bedknives\*.

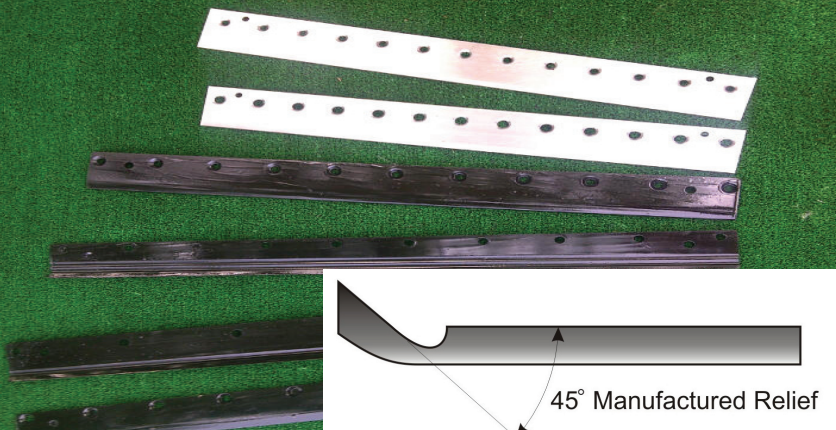

- No need to spend time grinding relief, saving dollars.
- Set grinding stone at 2 to 3 degrees negative.
- Then make 2 or 3 passes to establish the "land area" and you're done.
- Makes mid-season touch up a breeze.
- "Manufactured Relief" is exclusive to TurfPride.

Grinding Stone



Set Stone at 2°- 3° Negative,  
Make a Couple of Passes to  
Establish "Land" Area

**PLACE ORDERS NOW  
FOR FALL DELIVERY!**



turfprideusa.com  
e-mail: sales@turfprideusa.com  
334.488.3939

\*excludes tournament bedknives